



CHILD RESTRAINT SEAT TETHER ANCHOR COMPONENTS

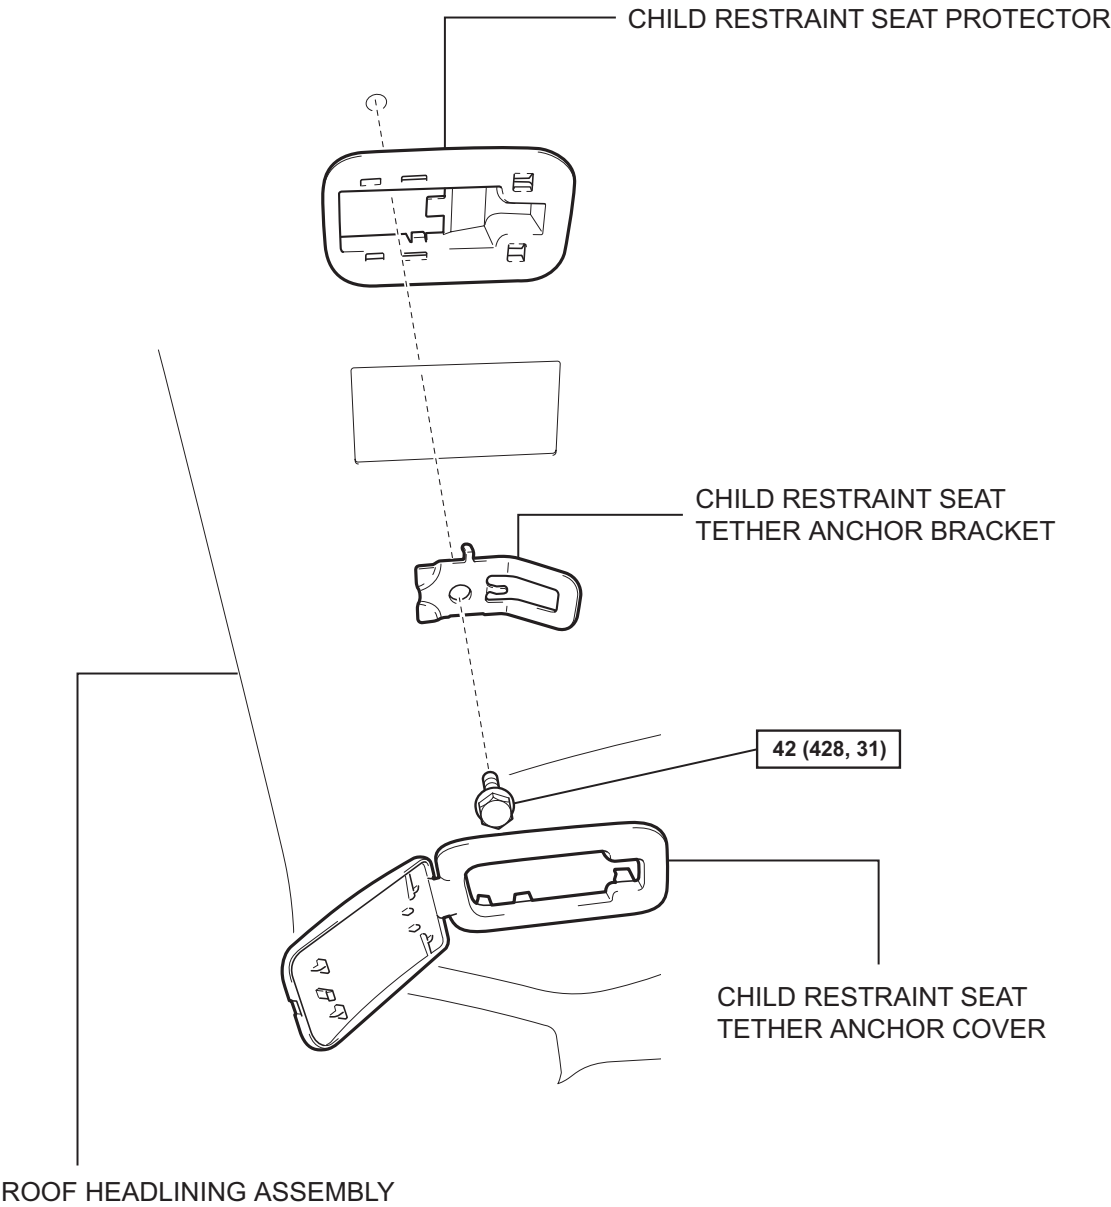


N*m (kgf*cm, ft.*lbf) : Specified torque


w/ Curtain Shield Airbag

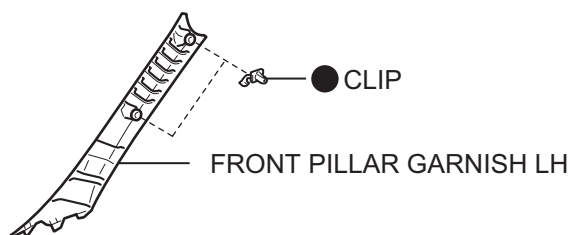

CENTER PILLAR GARNISH LH

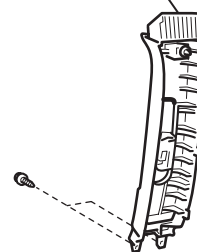


FRONT PILLAR GARNISH LH

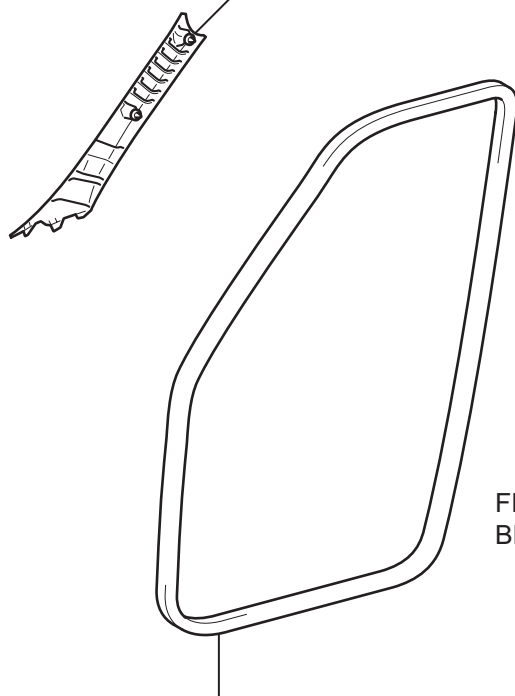

LAP BELT OUTER ANCHOR COVER



42 (428, 31)

FRONT SEAT OUTER BELT ASSEMBLY LH

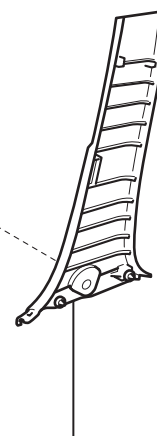


LOWER CENTER PILLAR GARNISH LH

 FRONT DOOR OPENING TRIM WEATHERSTRIP LH

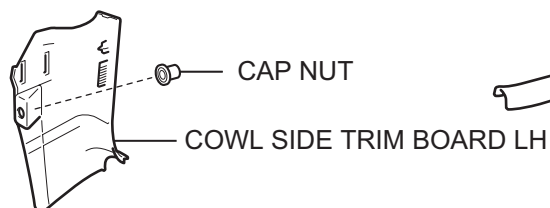


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

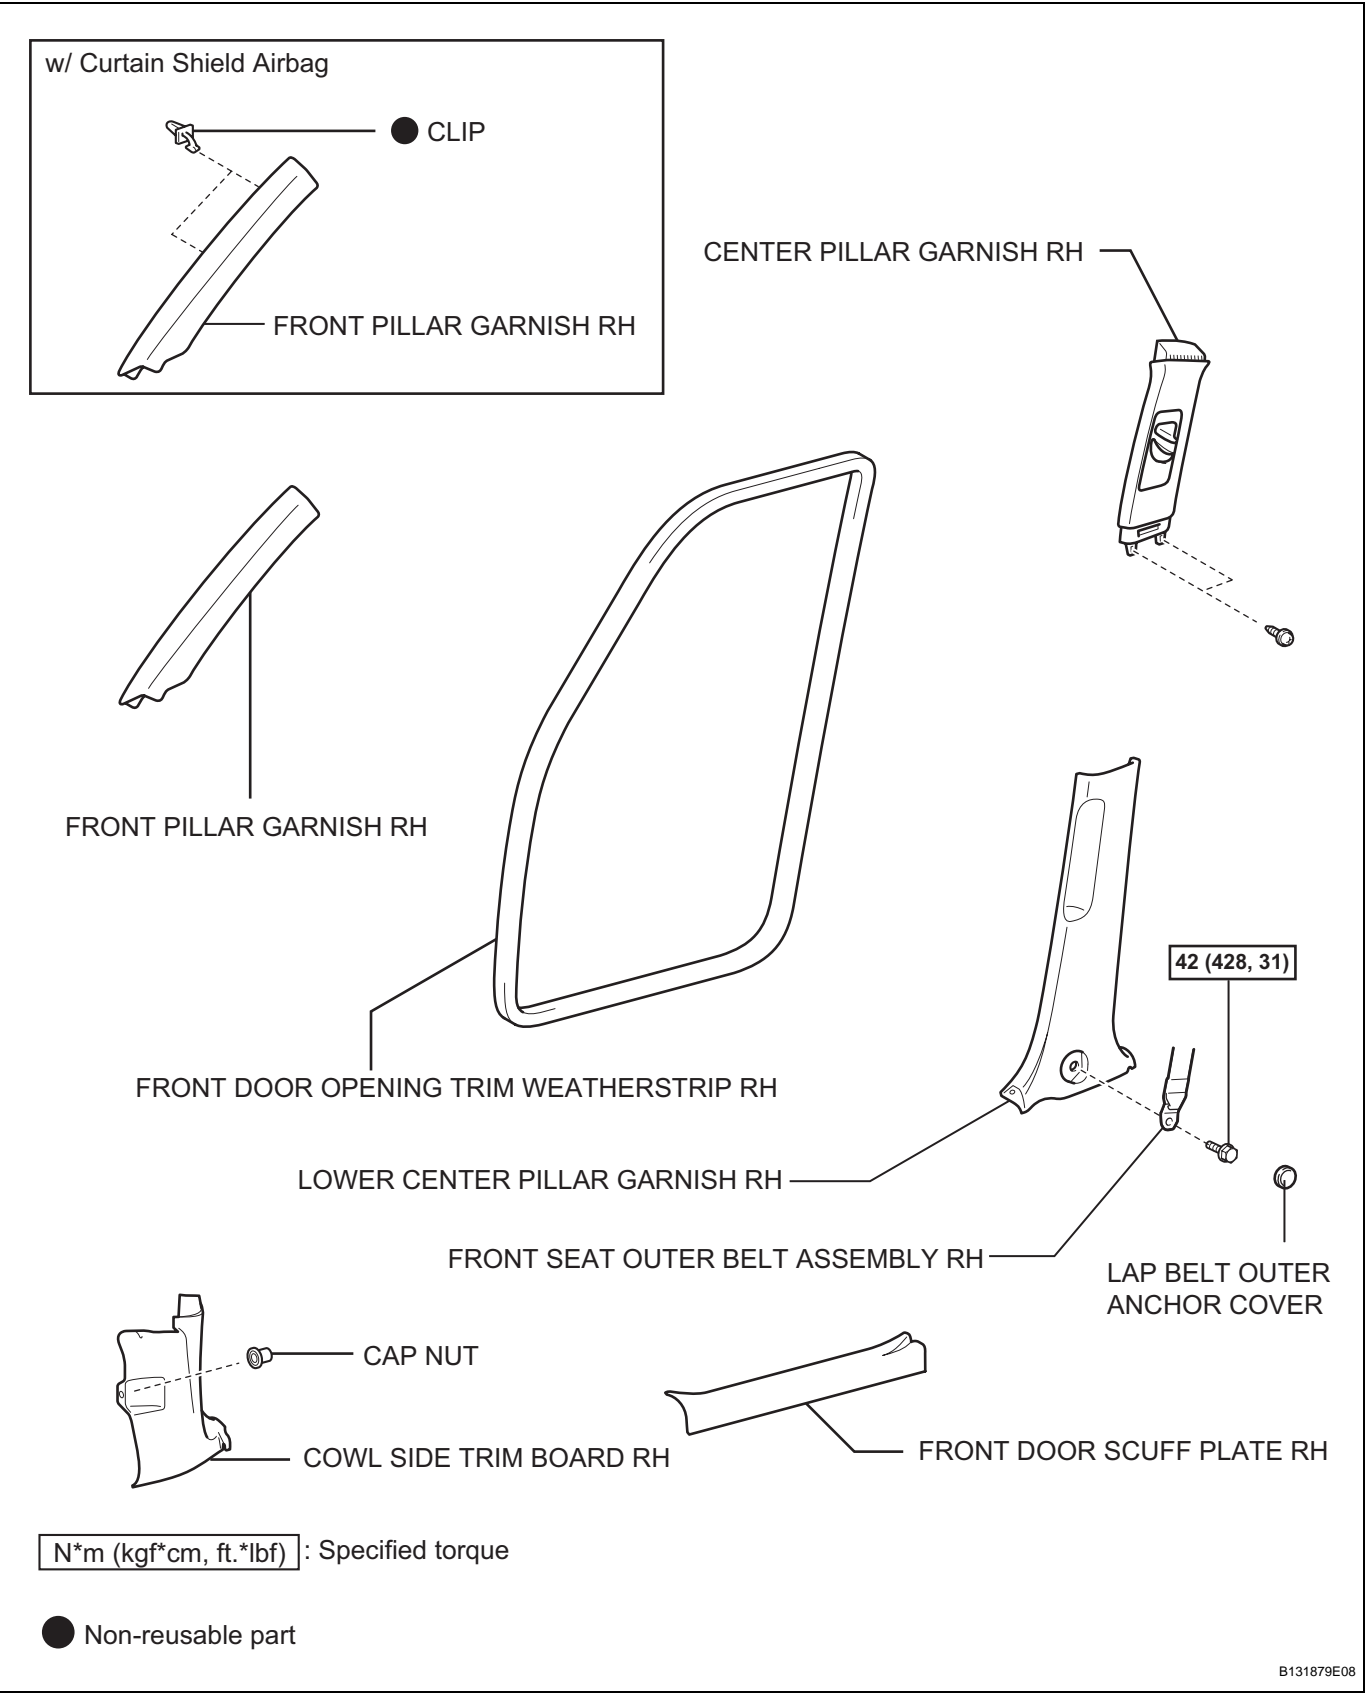

INNER ROOF SIDE GARNISH ASSEMBLY LH

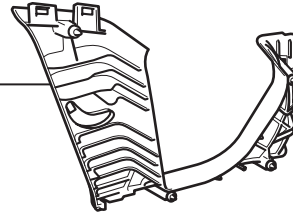REAR DOOR OPENING TRIM
WEATHERSTRIP LH

SIDE WINDOW
GARNISH HOOK

ROPE HOOK

42 (428, 31)

42 (428, 31)

DECK TRIM SIDE PANEL ASSEMBLY LH

REAR POWER POINT SOCKET ASSEMBLY


ROPE HOOK

REAR DOOR SCUFF PLATE LH


$\boxed{\text{N}\cdot\text{m} \text{ (kgf}\cdot\text{cm, ft.}\cdot\text{lbf)}} : \text{Specified torque}$

SB

w/ Rear No. 2 Seat

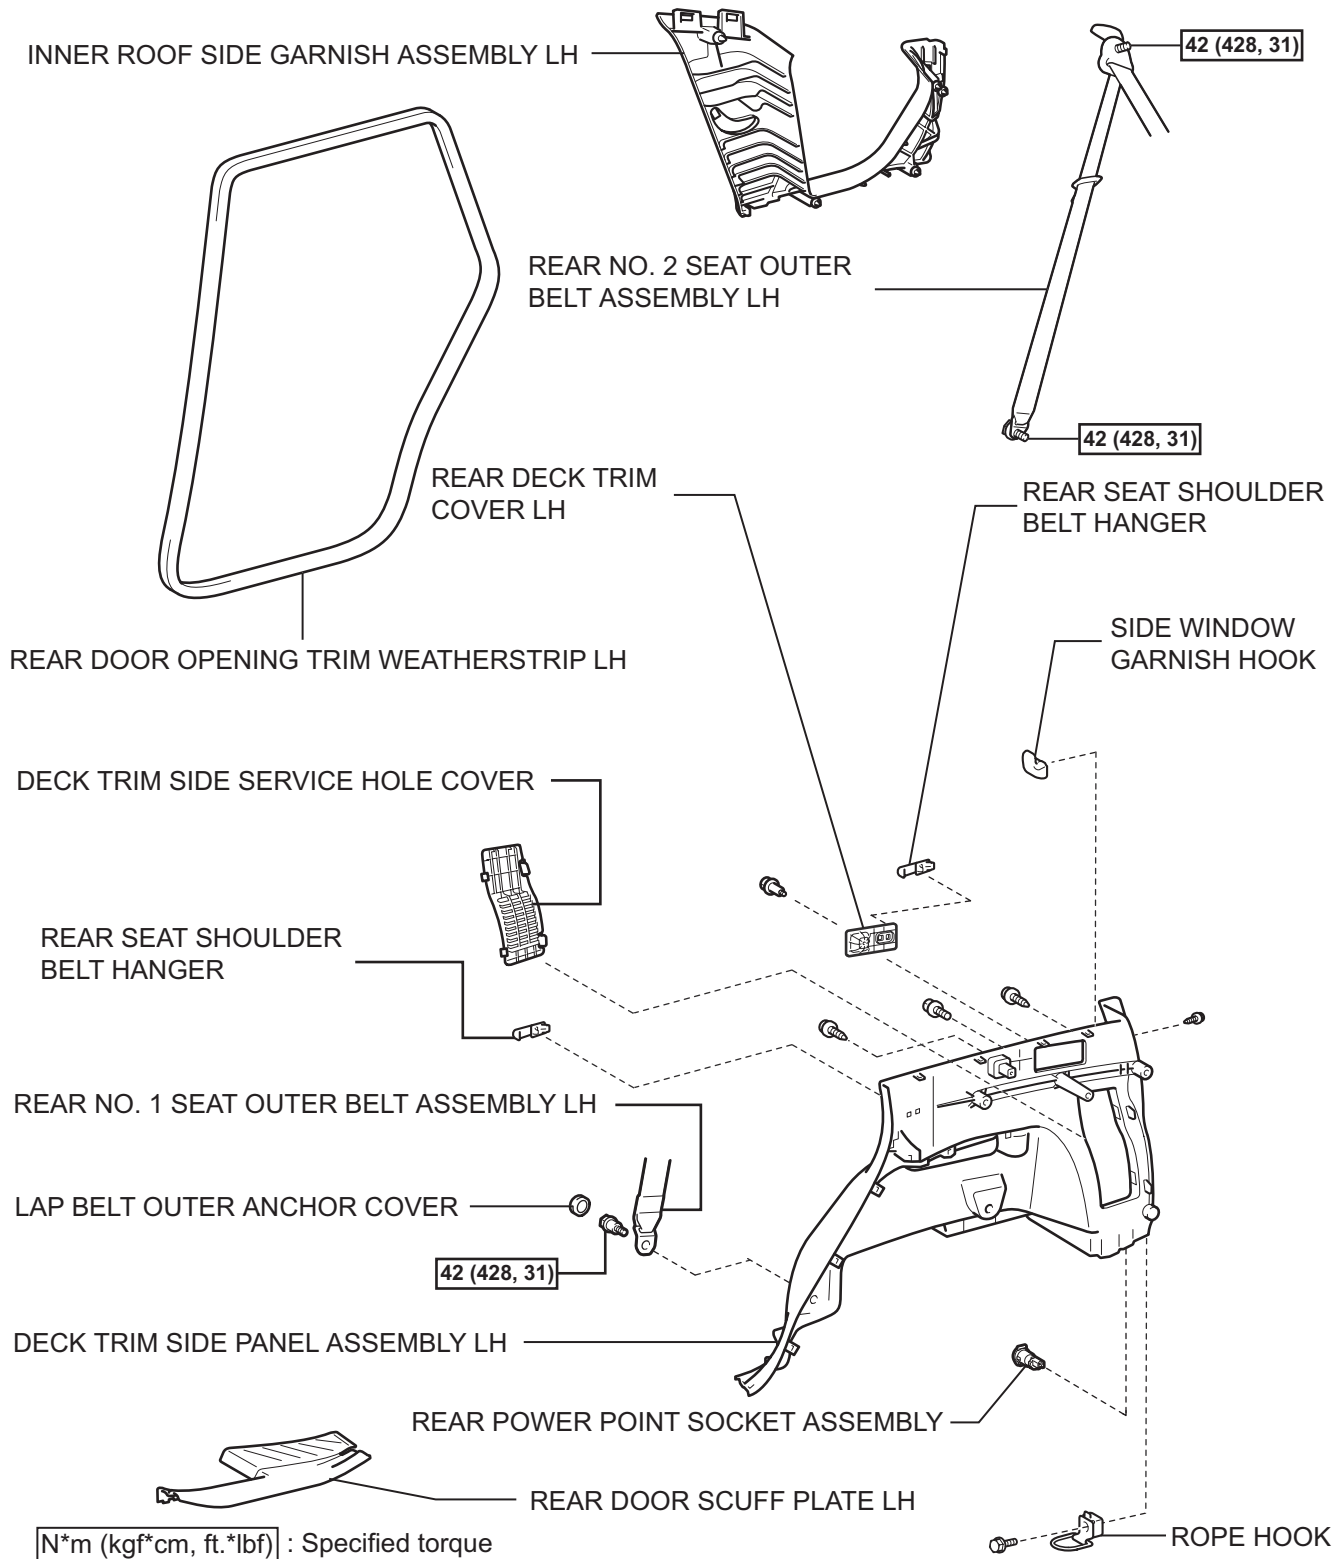

w/o Rear No. 2 Seat

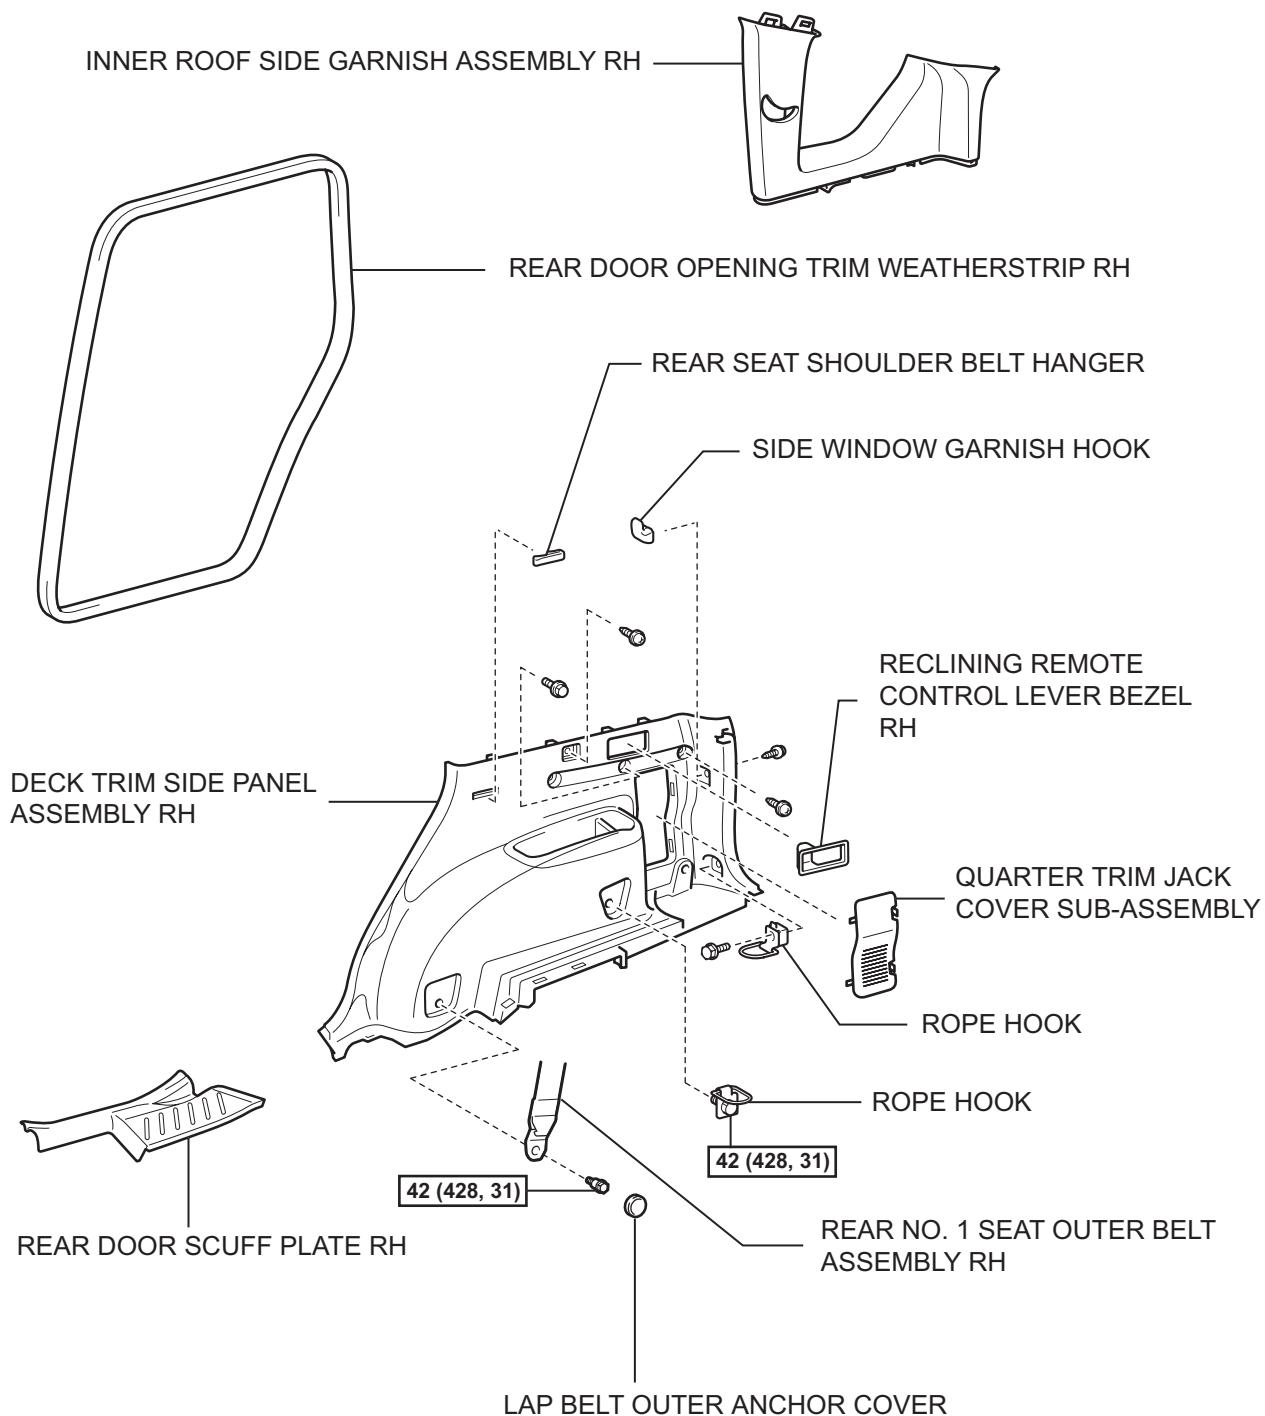


N*m (kgf*cm, ft.*lbf) : Specified torque

T


B131940E15

SB

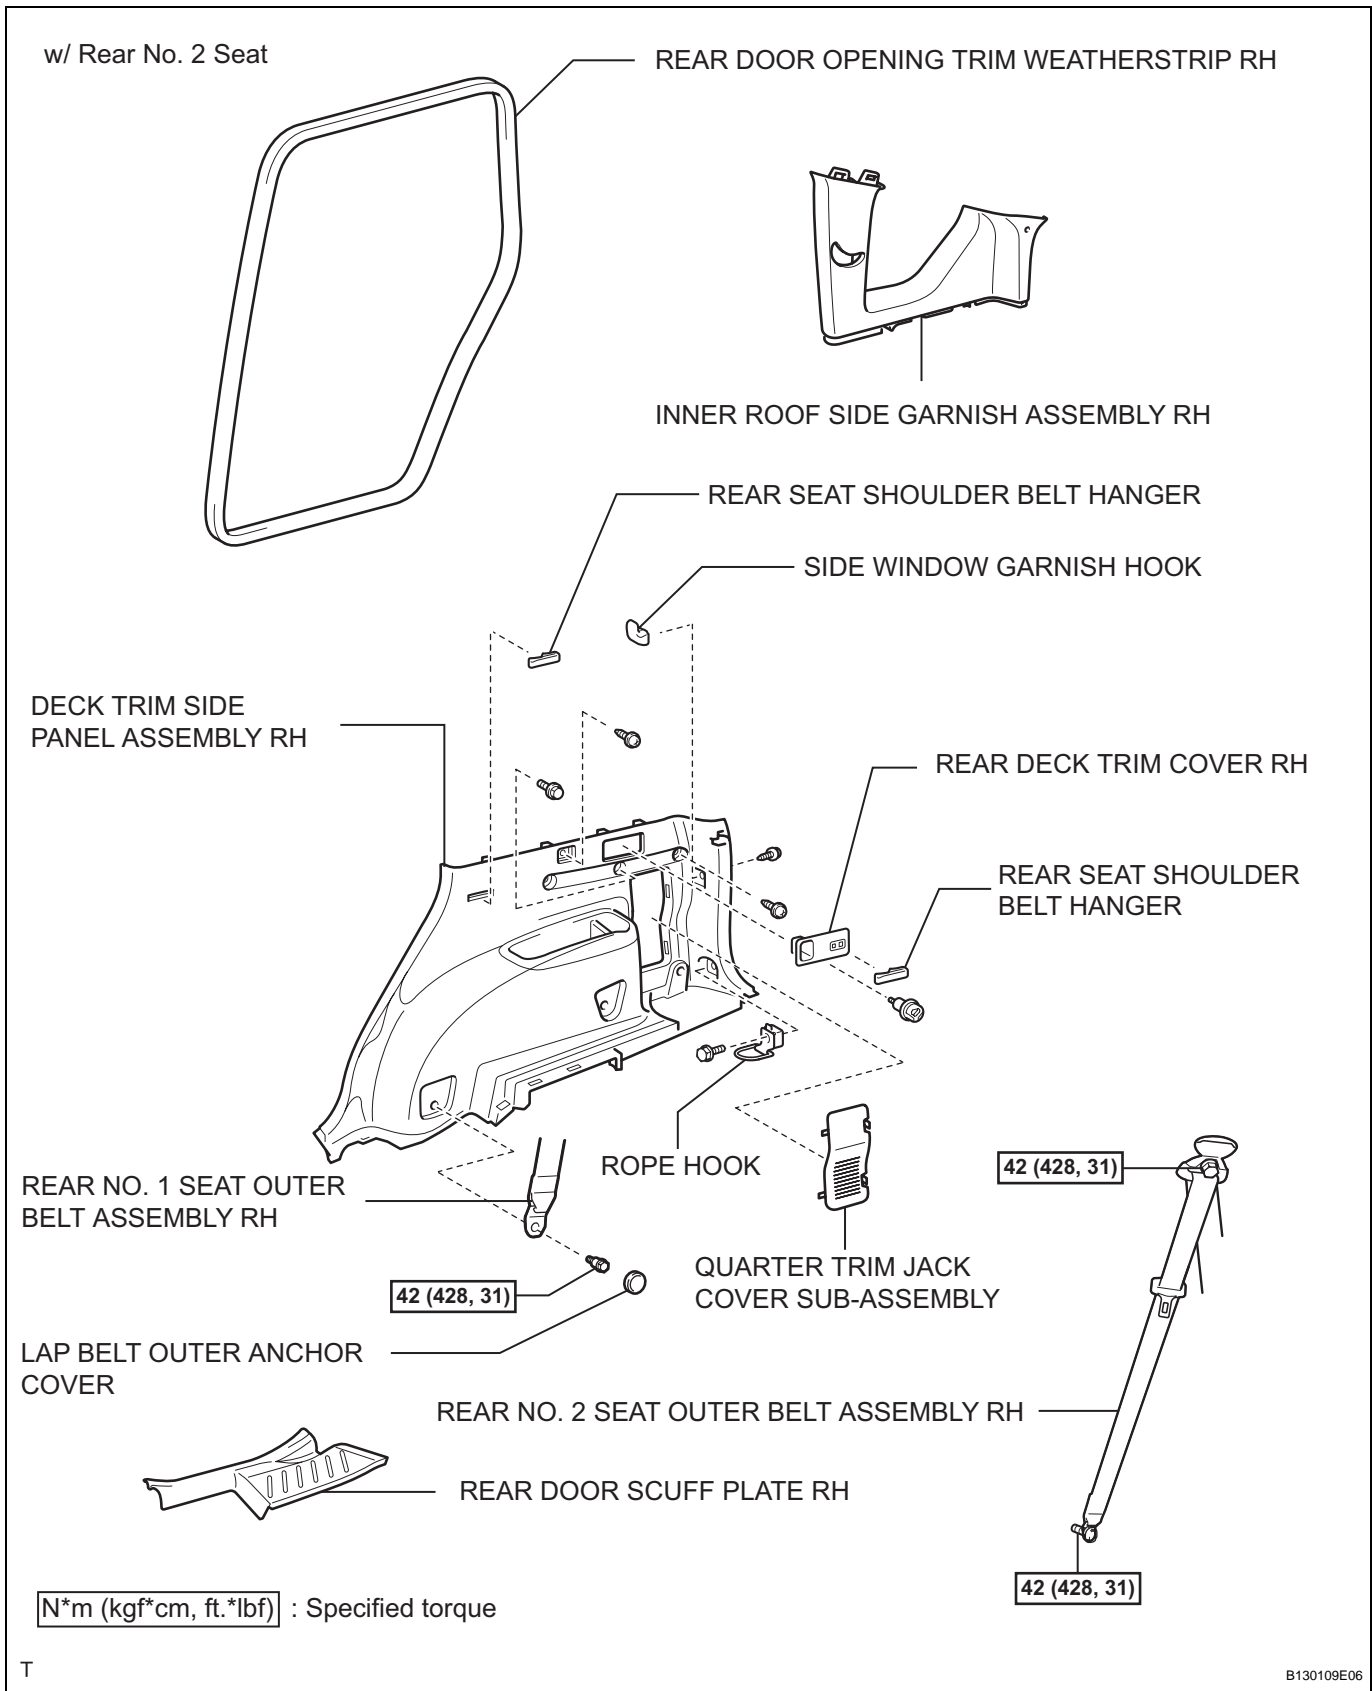

[N*m (kgf*cm, ft.*lbf)] : Specified torque

w/o Rear No. 2 Seat

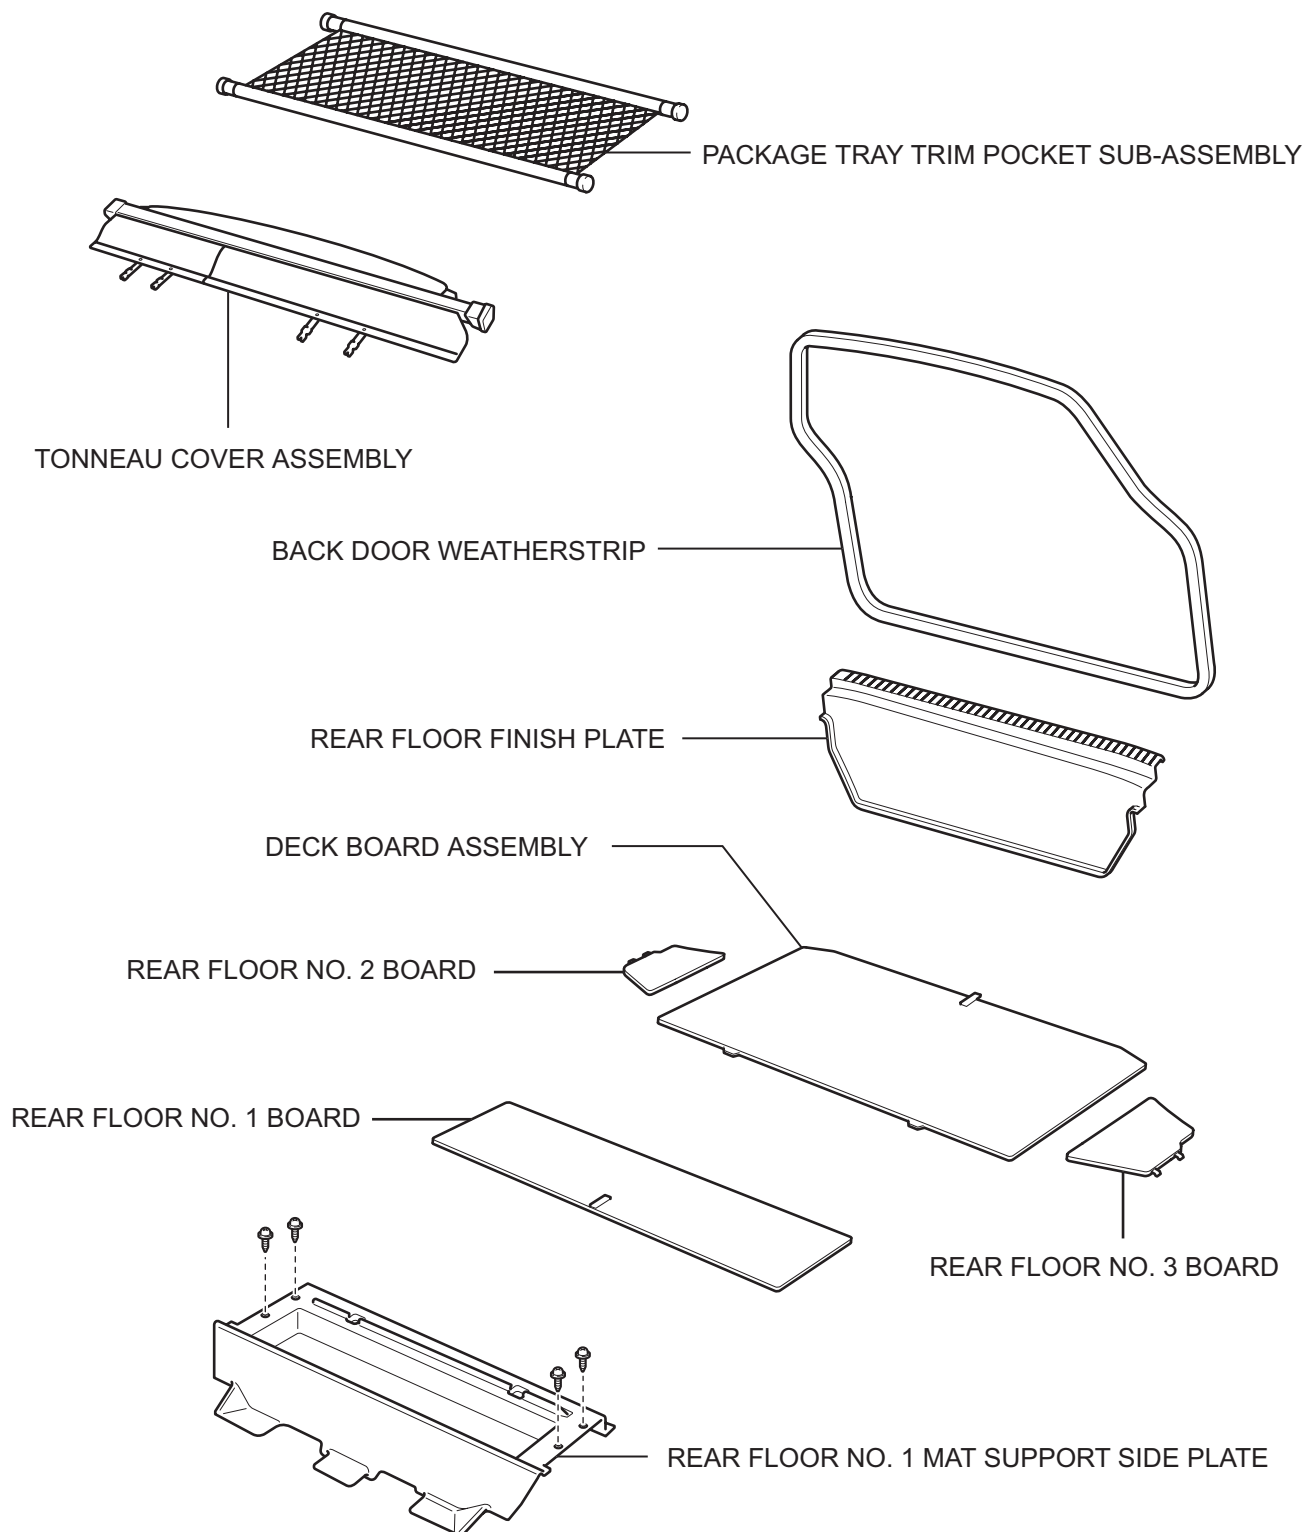


T

B130111E20


SB

w/ Rear No. 2 Seat

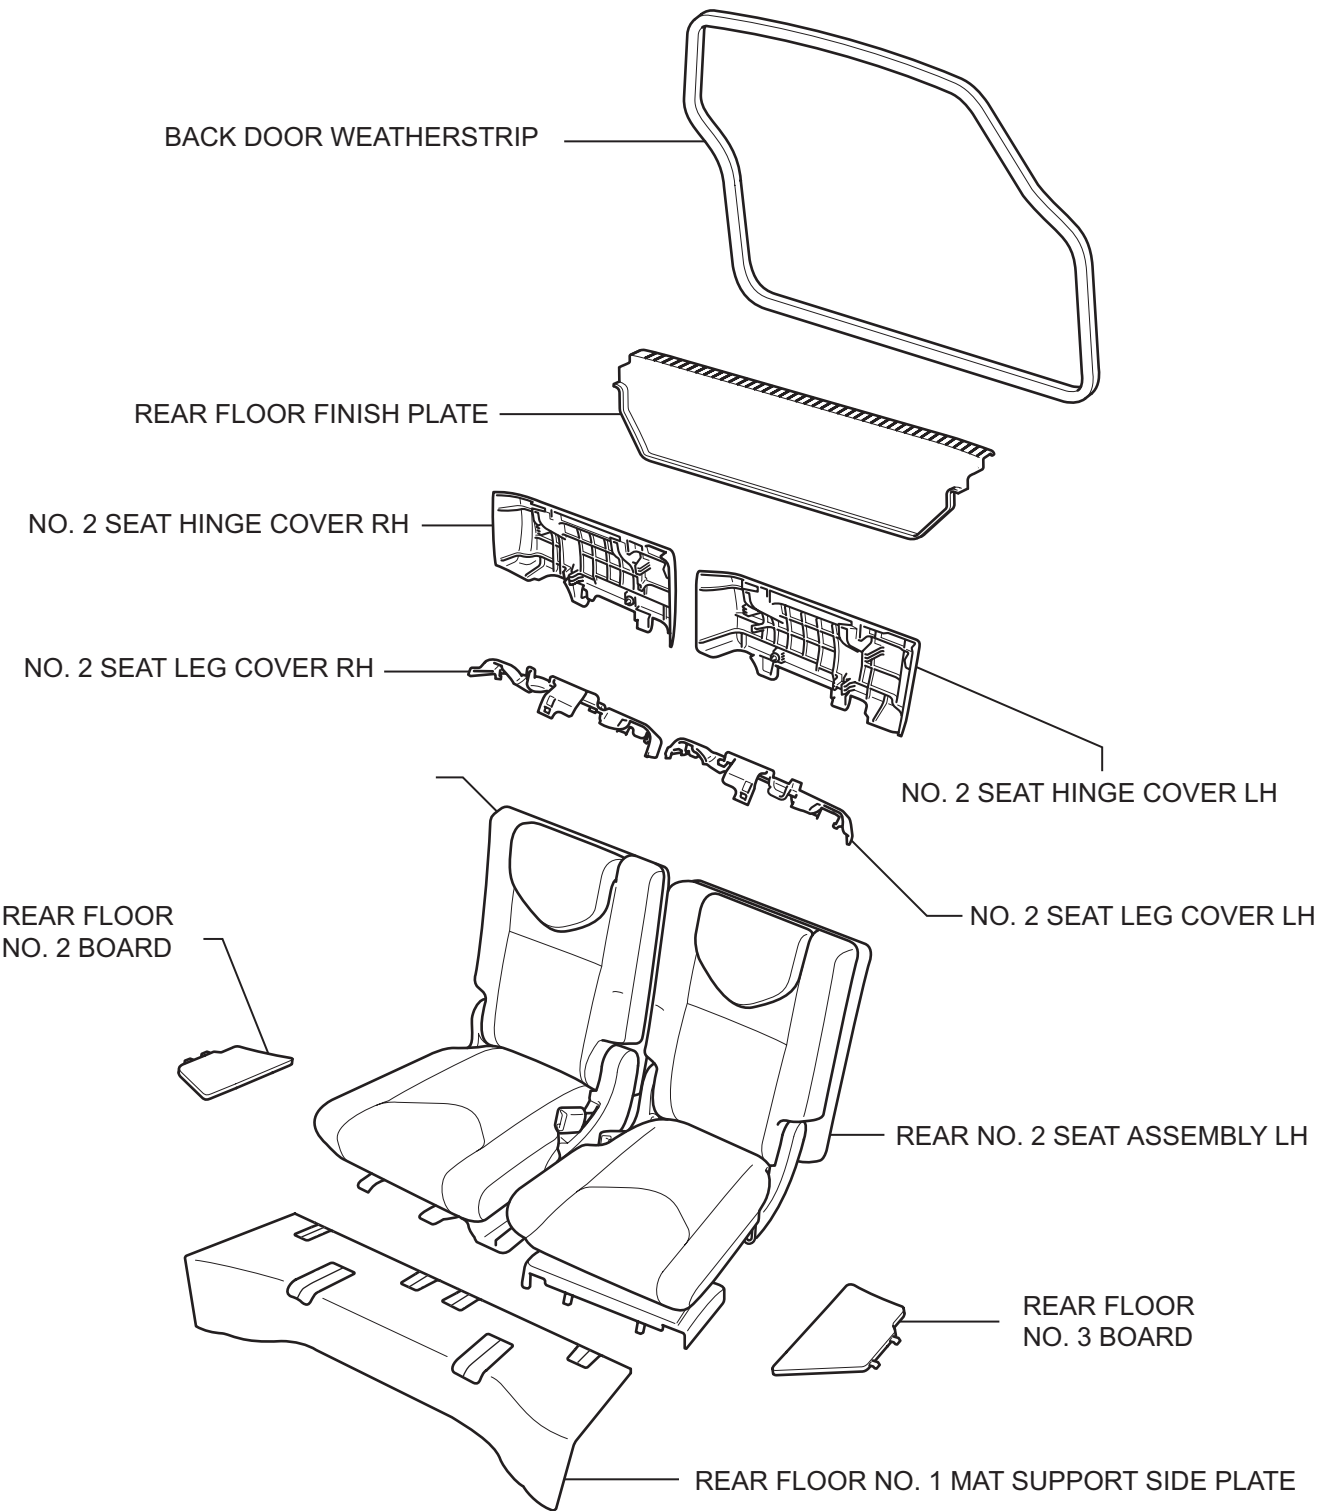


SB

INSTRUMENT PANEL SUB-ASSEMBLY

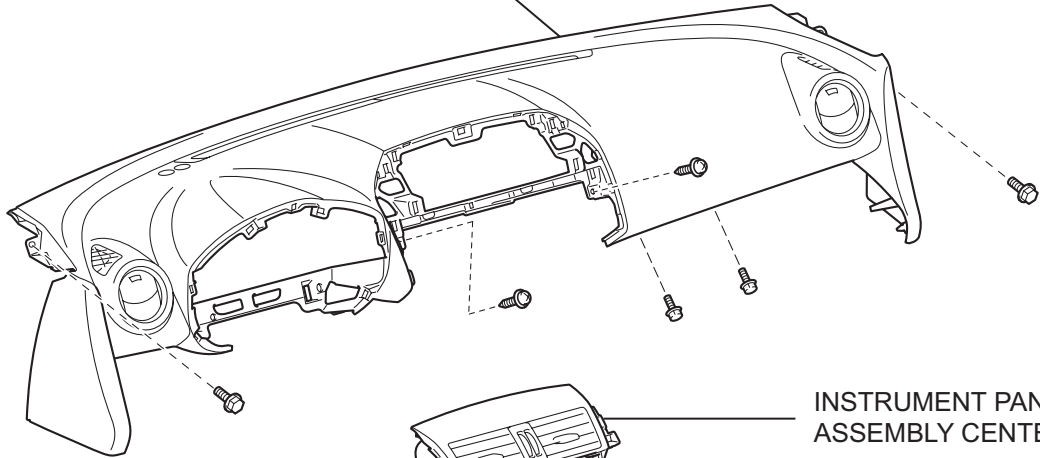


INSTRUMENT PANEL REGISTER
ASSEMBLY CENTER

 
NO. 2 INSTRUMENT
CLUSTER FINISH PANEL
CENTER




NO. 1 INSTRUMENT
CLUSTER FINISH
PANEL CENTER

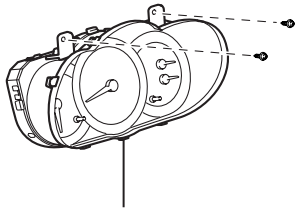

COMBINATION METER ASSEMBLY

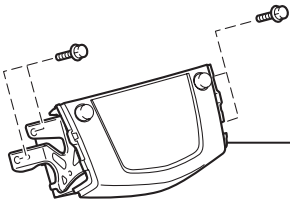


RADIO RECEIVER

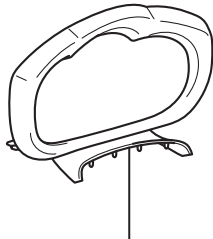


INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY


GLOVE COMPARTMENT DOORSTOPPER
SUB-ASSEMBLY

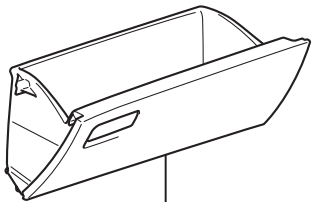

GLOVE COMPARTMENT
DOOR ASSEMBLY

SB

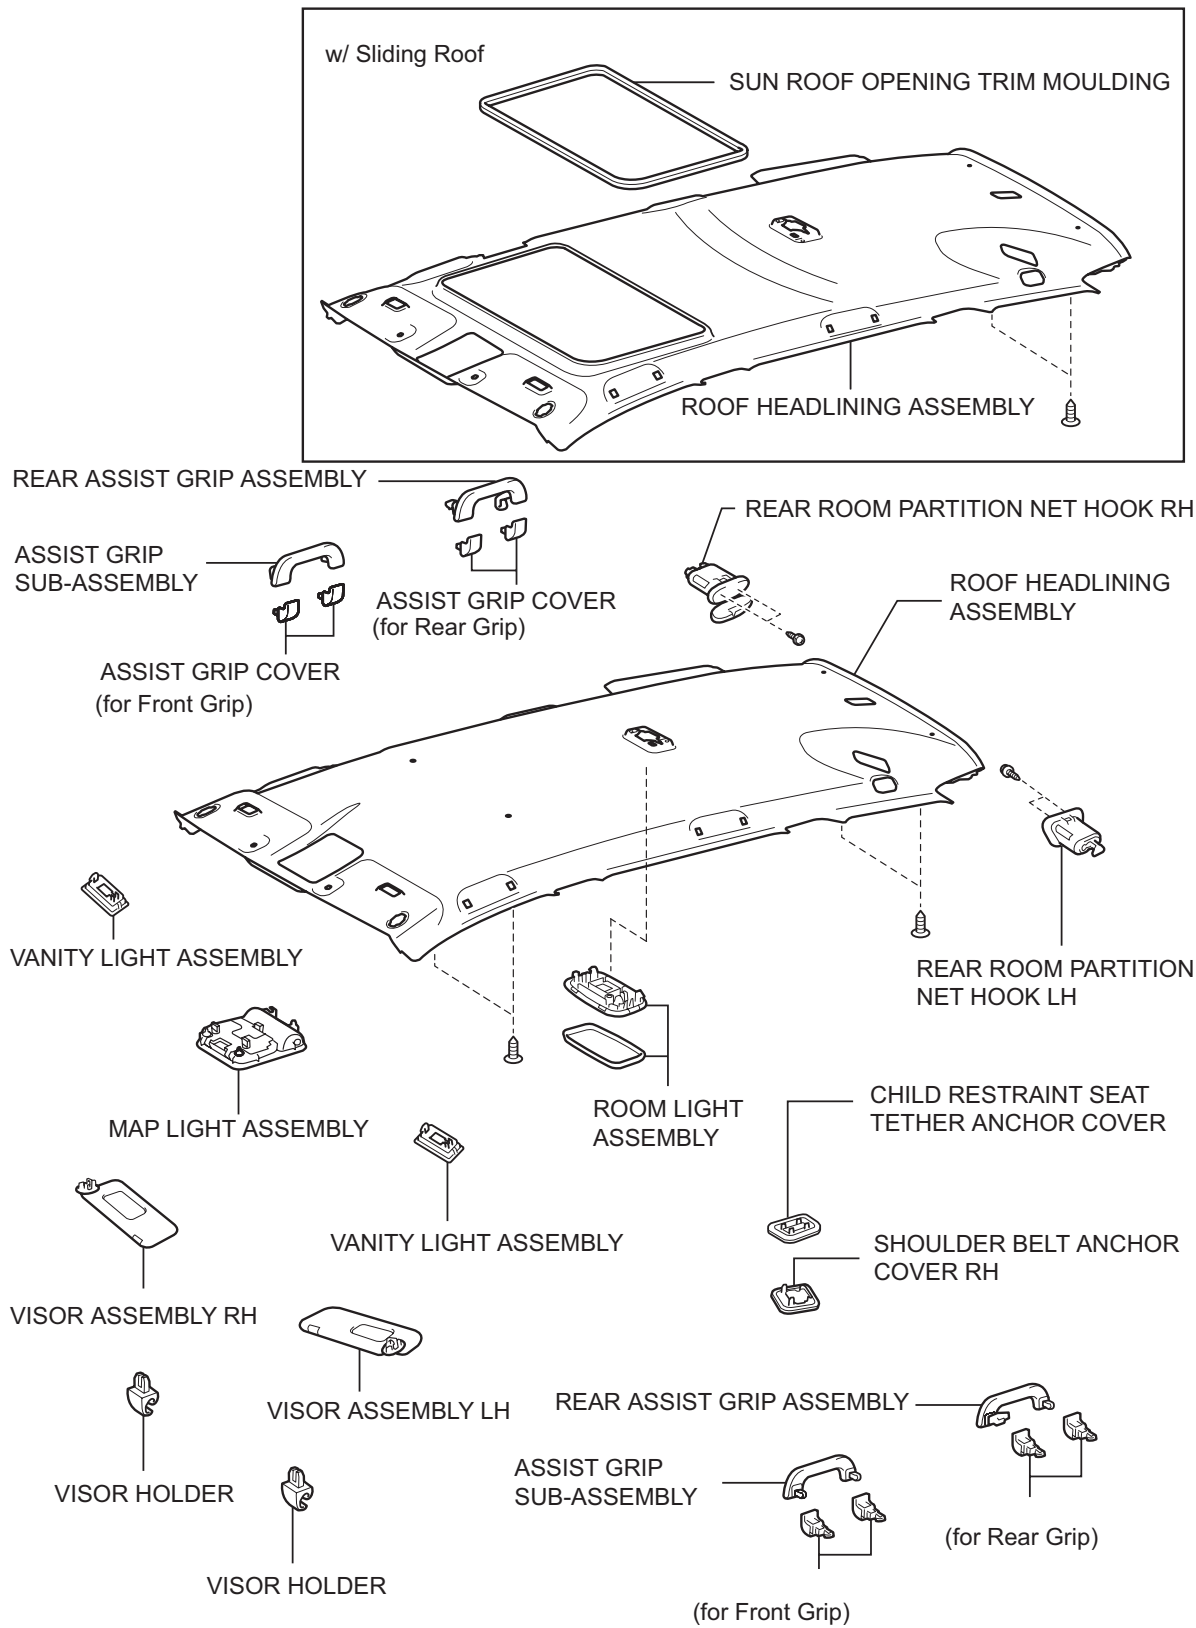

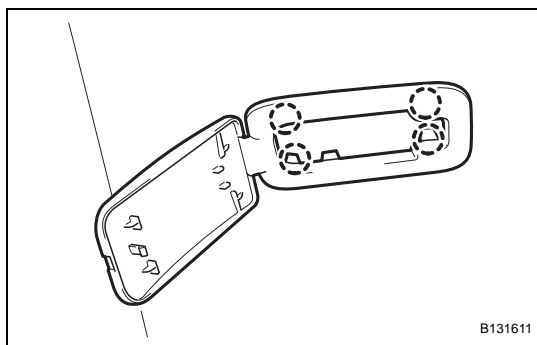

REMOVAL

1. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR COVER

- (a) Using a screwdriver, detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

2. REMOVE ROOF HEADLINING ASSEMBLY

HINT:


It is not necessary to completely remove the roof headlining. Slightly lower the rear section of the roof headlining.

- (a) Partially remove the roof headlining (see page [IR-26](#)).

3. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET

- (a) Remove the bolt and bracket.

4. REMOVE CHILD RESTRAINT SEAT PROTECTOR

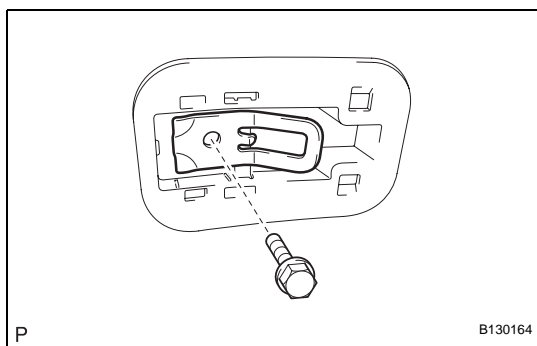

INSTALLATION

1. INSTALL CHILD RESTRAINT SEAT PROTECTOR


2. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET

- (a) Align the claws with the positioning holes, and install the bracket with the bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

3. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining (see page [IR-49](#)).

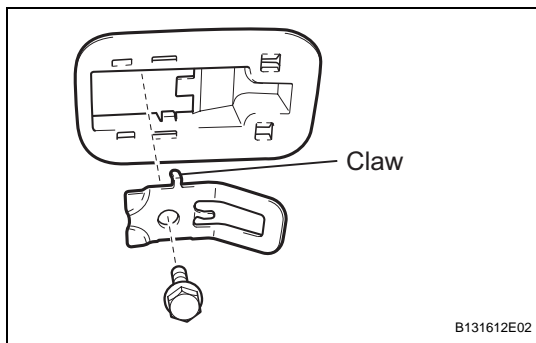

4. INSTALL CHILD RESTRAINT SEAT TETHER ANCHOR COVER

- (a) Install the cover with the 4 claws.

